



## Square Bay Window - with recess

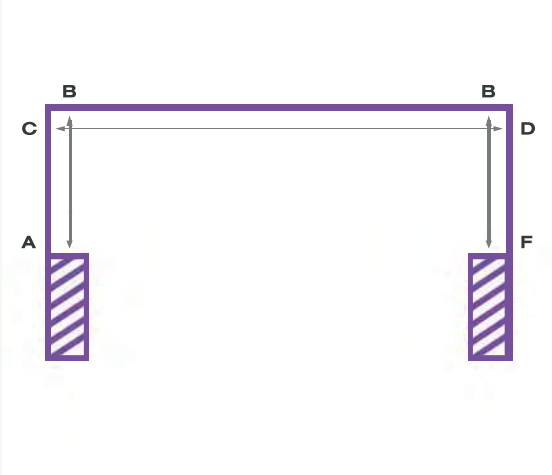

1. Measure points A to B. Deduct 110mm for clearance. When ordering, call it 'Blind Size'.
2. Measure points C to D. Deduct 10mm for clearance (Blind Size).
3. Measure points E to F. Deduct 110mm for clearance (Blind Size).
4. Measure the drop of the bay window in several places (at least seven all the way around). Take the smallest measurement and deduct 10mm for clearance (Blind Size).

## Square Bay Window - with little or no recess

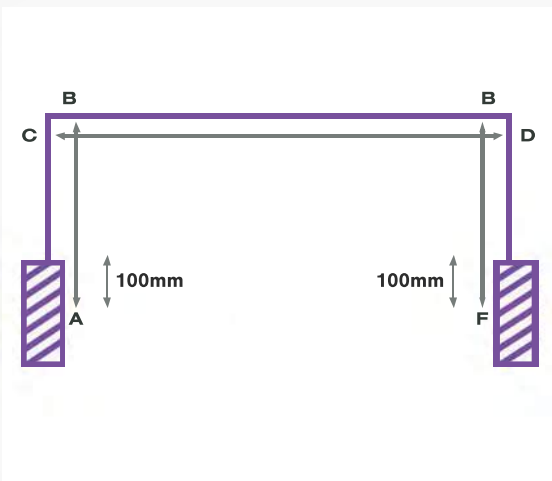

1. Measure points A to B. Deduct 100mm for clearance. When ordering, call it 'Blind Size'.
2. Measure points C to D. Deduct 10mm for clearance (Blind Size).
3. Measure points E to F. Deduct 100mm for clearance (Blind Size).
4. Measure the drop of the bay window in several places (at least seven all the way around). Take the smallest measurement and deduct 10mm for clearance (Blind Size).

Using this guide, the blind size measurements you give us are the finished widths of the tracks and the finished drop of the blinds from the top of the bracket to the bottom of the fabric.

### Important

Never measure existing blinds that you may have in your window when ordering a completely new set of blinds - you must measure the window as if it's a blank canvas.